

Installation

E19-460NB

Deck-Mounted Hand-Held Drench Hose

Table of Contents

Pre-Installation Information	2
Installation	2
Assembly of Components and Parts List	3



E19-460NB Installation

IMPORTANT



Read this installation manual completely to ensure proper installation, then file it with the owner or maintenance department. Compliance and conformity to drain requirements and other local codes and ordinances is the responsibility of the installer.



Separate parts from packaging and make sure all parts are accounted for before discarding any packaging material. If any parts are missing, do not begin installation until you obtain the missing parts.



Flush the water supply lines before beginning installation and after installation is complete. Test the unit for leaks and adequate water flow. Main water supply to the eyewash should be "ON" at all times. Provisions shall be made to prevent unauthorized shutoff.



The ANSI Z358.1 standard requires an uninterrupted supply of flushing fluid. Bradley plumbed emergency fixtures require a minimum of 30 PSI (0.21 MPa) flowing pressure. Flushing fluid should be tepid per ANSI Z358.1.



The inspection and testing results of this equipment should be recorded weekly to verify proper operation. This equipment should be inspected annually to ensure compliance with ANSI Z358.1.



Workers who may come in contact with potentially hazardous materials should be trained regarding the placement and proper operation of emergency equipment per ANSI Z358.1.



For questions regarding the operation or installation of this product, visit www.bradleycorp. com or call 800.BRADLEY (272.3539).

Product warranties and service parts information may also be found under "Products" on our web site at bradleycorp.com.

Installation

NOTICE! Avoid cleaners containing organic solvents, alcohols, and hydrocarbons. Rinse with water after cleaning.

Supplies Required:

• 3/8" NPT water supply inlet (30-0 psi)



Local codes may require the installation of a backflow prevention valve to complete proper installation. Compliance with local codes is the responsibility of the installer. Valve must be tested annually to verify that it is functioning properly. Backflow prevention valves are not included with the fixture and may be supplied by the contractor or purchased from Bradley Corporation.

Step 1: Prepare deck for installation

- 1. Rough-in %" NPT supply piping from wall where drench hose is desired (piping supplied by installer).
- 2. Select desired location in deck for drench hose and drill a 34mm (15/16") diameter hole.
- 3. Install the mounting collar, o-ring, and locknut provided (refer to page 3).

Step 2: Connect water supply



Apply pipe sealant to all pipe joints.


- 1. Connect one end of the drench hose to the 3/8" NPT water supply.
- 2. Insert the hose through the mounting collar assembly. Slide the handle over the hose (above the deck).
- 3. Install the valve body onto the other end of the hose. Thread the handle onto the valve body.
- 4. Open the water supply lines. Test for leaks and adequate water flow.




The drench hose has been completely assembled and tested at the factory.

Installation E19-460NB

Assembly of Components and Parts List

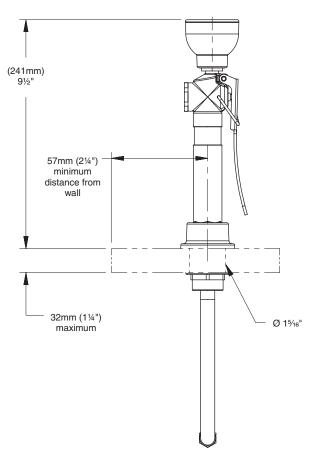

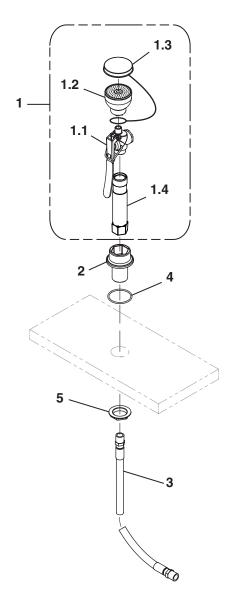



Water flow rate: 2.2–2.7 gallons (8.31–10.2 liters) per minute.

Item	Part No.	Qty.	Description
1	S39-817	1	Sprayhead Assembly
1.1	S27-332	1	Valve, Hose Spray
1.2	S45-2453	1	Service Kit EFW - Black Sprayheads
1.3	S53-063	1	Dust Cover
1.4	128-182	1	Handle, Drench Hose

Item	Part No.	Qty.	Description
2	150-225	1	Mounting Collar
3	S89-002	1	Yellow Hose, 3/8"
4	125-107	1	O-ring
5	161-161	1	Flange Nut